


# USER MANUAL

- 1. Specifications
- 2. Chassis Parts
- 3. Control Panel Functions
- 4. 3.5"/2.5" HDD/SSD Installation
- 5. Remove the Front Panel Instructions
- 6. Cooling System Installation
- 7. Master Fan & Sub-fan Installation
- 8. PSU Fans Installation
- 9. Fan Installation
- 10. RGB Lighting Switching


### Specifications

Model		
Model Name:	Aero	
Model Number:	CSAZ-480	
Specifications		
Type:	ATX Mid Tower	
Color:	Black/Black(interior)	
Side Panel Window:	Left side panel: slidable iron mesh side panel	
Max CPU Cooler Height:	UP to 170mm	
Max Video Card Length:	Up to 400 mm long video card	
Power Supply:	Not included	
Motherboard Compatibility:	ard Compatibility: E-ATX \ ATX \ Micro ATX \ ITX	
Expansion		
External 5.25" Drive Bays:	0	
Internal 2.5" Drive Bays:	Up to 4	
Internal 3.5" Drive Bays:	Up to 2	
Expansion Slots:	7	
Top Ports:	Power button, LED button, HD Audio, USB 3.0 x 2	
Physical Specifications		
Case Dimension (HxWxD)	483x220x445mm/19x8.7x17.5 inches	
Weight:	6.1Kg /13.5lbs	
Features		
Mesh side panel:	The full mesh side windows allow for clear visuals to inner components and increased air intake, having maximum airflow performance.	
Addressable RGB Light Effects:	ARGB fans are controlled using the LED button. All addressable RGB devices can sync with the motherboard, allowing the motherboard software to control lighting directly.	
Available Fan Ports:	3x120mm or 3x140mm fan ports in the front (3x120mm LFO-3812D addressable ARGB fan included) 3x120mm or 2x140mm fan ports on the top 1x120mm fan port in the rear (1x120mm LFO-3812D addressable ARGB PWM fan included) 2x120mm fan ports on the Power Supply Shroud	
Water Cooling:	Supports radiators up to 280/360mm in the Front Supports radiators up to 280/360mm in the Top	
Dust Filters:	Removable (magnetic) dustproof net on the top, dust filter on bottom of chassis.	
Power Supply Support:	Bottom mounted ATX Power Supply	

<sup>%</sup>PWM Fan:The model comes with PWM fans and will run at top speed unless connected to a motherboard or controller.

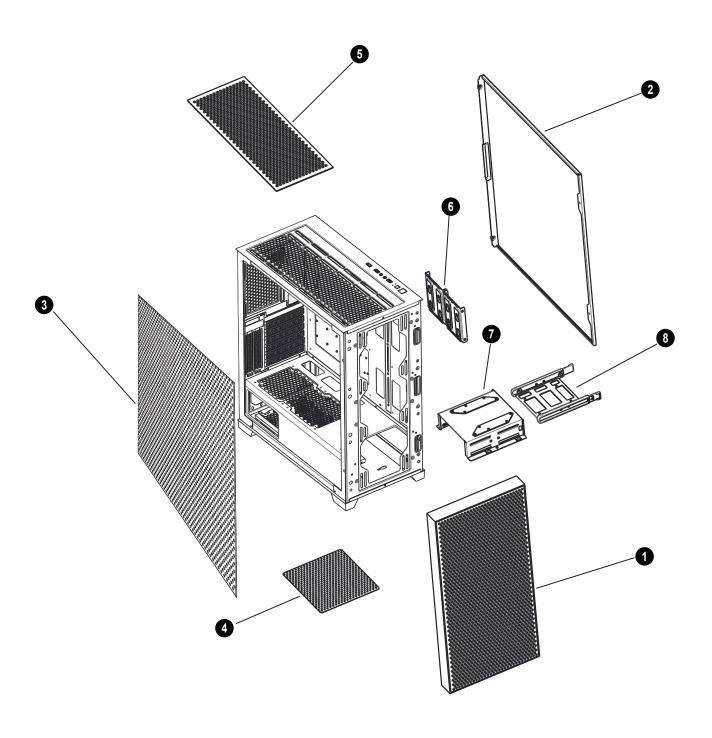


1	Front panel	
2	Metal side panel	
3	Mesh side panel	
4	Removable dust filter	
5	Removable magnetic mesh	
6	2.5" SSD tray x 2	
7	Hard disk cage	
8	3.5" HDD/ 2.5" SSD brackets	

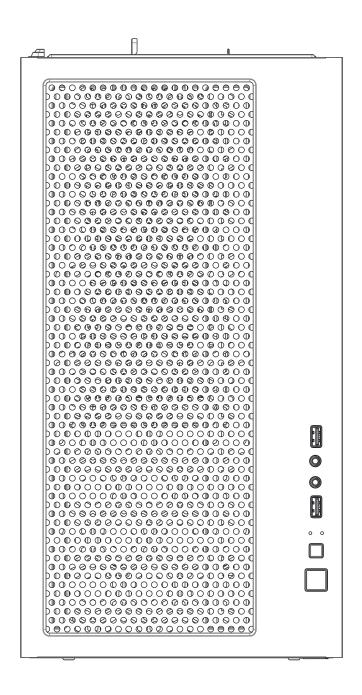


	POWER
	LED
0	Mic
0	Audio

USB 3.0
USB 3.0

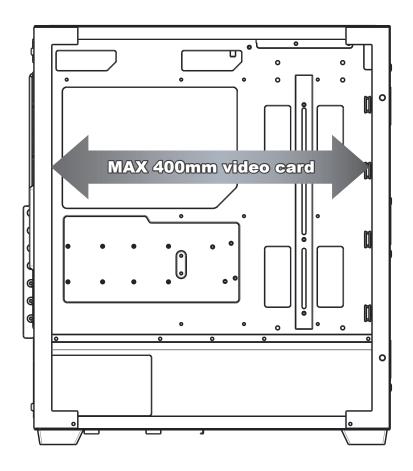

•Supports up to 400mm long video cards.

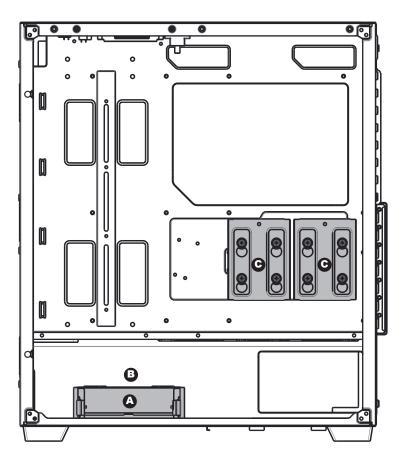




or





- ■Multifunctional hard disk bracket support 3.5" HDD or 2.5" SSD x 1 (♠)
- ■Multifunctional hard disk bracket support 2.5" SSD x 2 ( )
- ■Multifunctional hard disk cage support 3.5" HDD or 2.5" SSD x 1( ③ )

## Remove the Front Panel Instructions

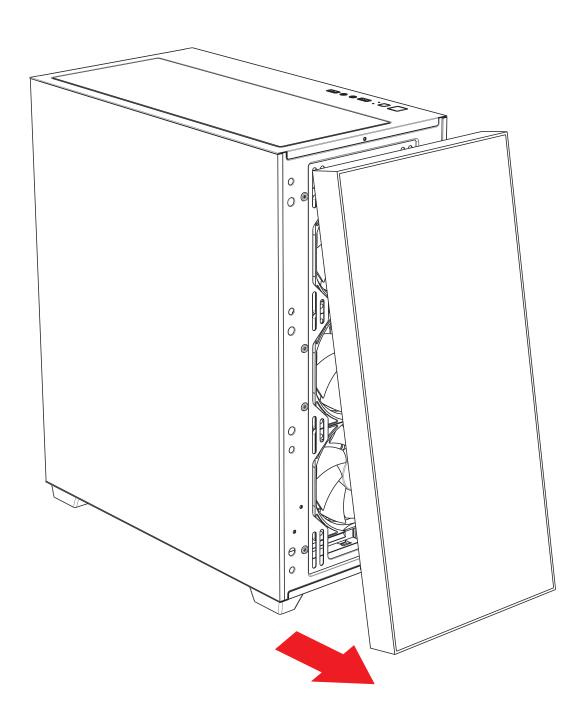


## **Front**

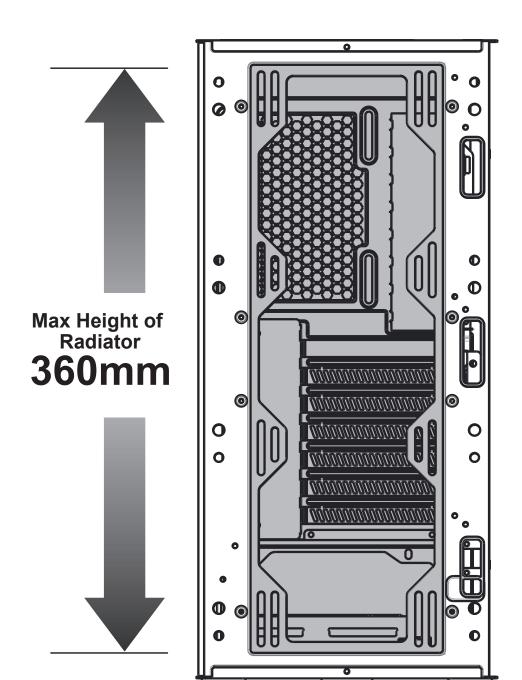

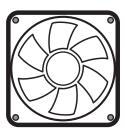


120mm x3

or

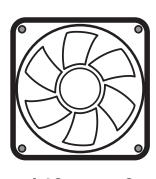


140mm x3


# Top

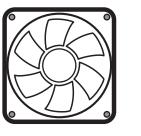

120mm x3

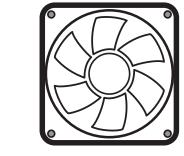


140mm x2

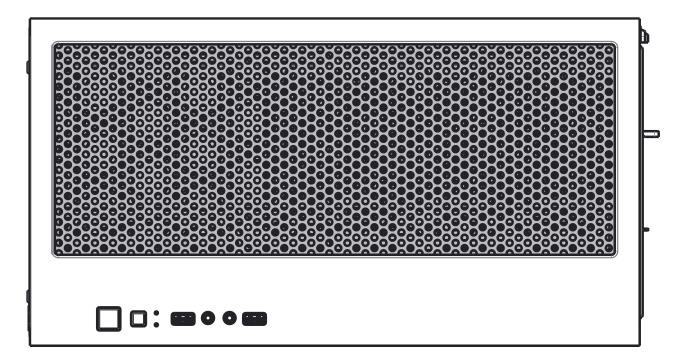


or




# Rear

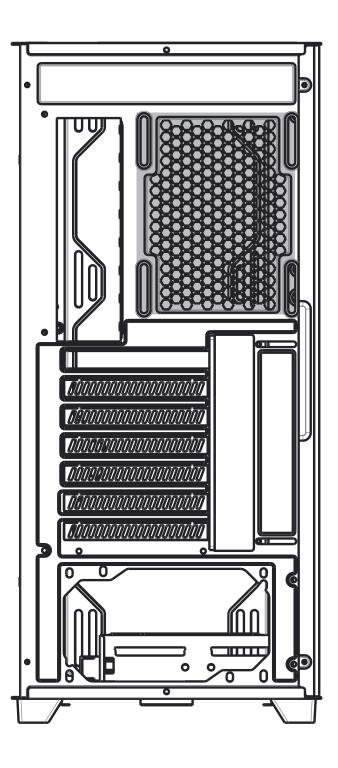

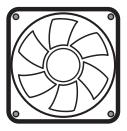


120mm x1

### Master Fan & Sub-fan Installation

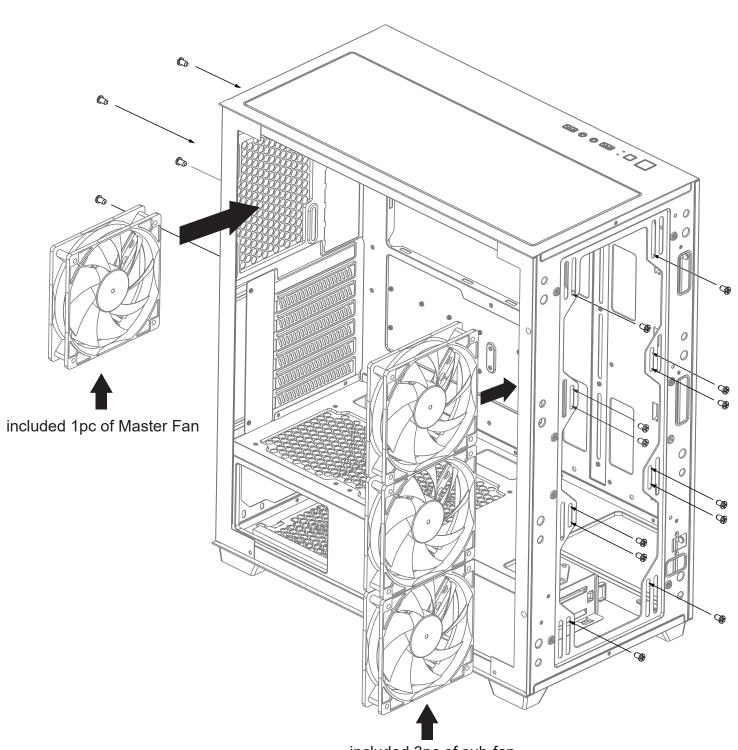


included 3pc of sub-fan

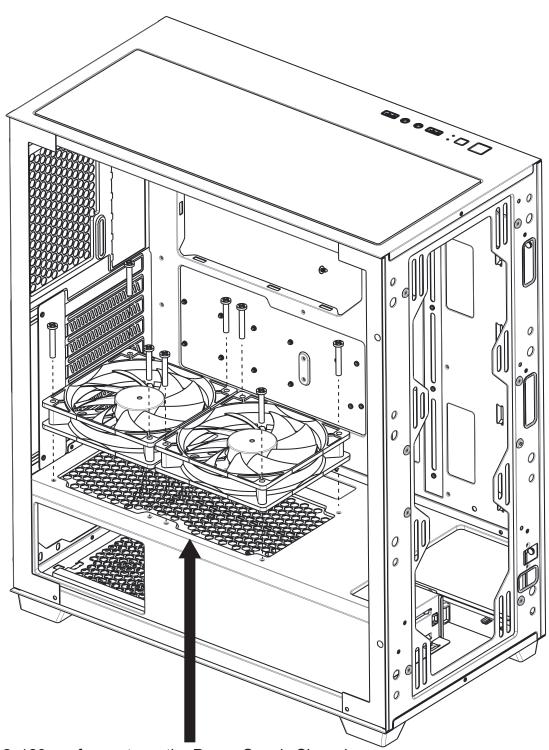

2x120mm fan ports on the Power Supply Shroud


#### Fan Installation Version 1

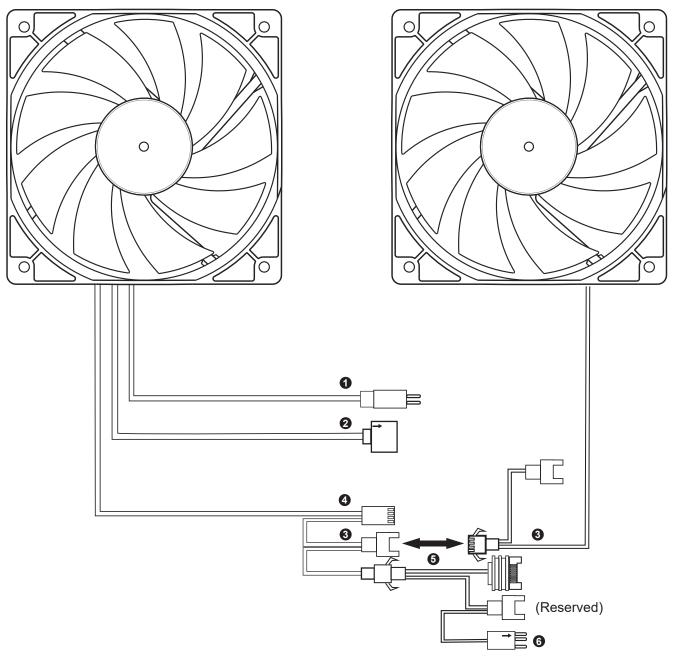

	CONNECTOR	CONNECTION
1	Reset (LED) S/W (2pin)	LED Button
2	ARGB LED 5V (3pin) female connector	The 5V/3pin ARGB socket of the motherboard
3	Fan Connector	The master Fan connect to the sub-fan
4	Fan Connector PWM (4pin)	CHA_FANx socket of the motherboard
5	SATA	Power Supply
6	ARGB LED 5V (3pin) male connector	Other 5V/3pin ARGB devices

- # Before the fan starts,please make sure the PWM connector 4 and SATA connector 5 each are connected.
- Press the LED button to cycle through different RGB lighting modes, all ARGB devices are controlled by the LED button. (make sure the other 3pin ARGB devices are connected with ⑥)
- \*Ensure ② insert the motherboard, hold the LED button for 3 seconds to switch the RGB control function between motherboard RGB software and LED button.

#### Fan Installation Version 2

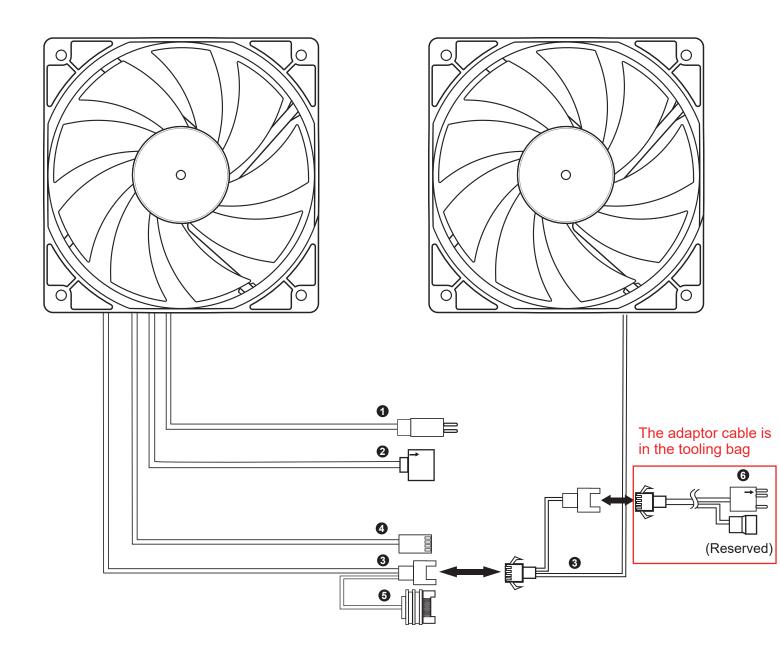

	CONNECTOR	CONNECTION
1	Reset (LED) S/W (2pin)	LED Button
2	ARGB LED 5V (3pin) female connector	The 5V/3pin ARGB socket of the motherboard
3	Fan Connector	The master Fan connect to the sub-fan
4	Fan Connector PWM (4pin)	CHA_FANx socket of the motherboard
⑤	SATA	Power Supply
6	ARGB LED 5V (3pin) male connector	Other 5V/3pin ARGB devices

- ※Before the fan starts, please make sure the PWM connector ④ and SATA connector ⑤ each are connected.
- \*\*Press the LED button to cycle through different RGB lighting modes, all ARGB devices are controlled by the LED button. (make sure the other 3pin ARGB devices are connected with ⑥)
- \*Ensure ② insert the motherboard, hold the LED button for 3 seconds to switch the RGB control function between motherboard RGB software and LED button.

